

CAPM-3o Carrier Frequency Pickup Module

Installation and Technical Data Guide

Installation:

- Ensure that the sensor cavity in the flow meter is free of debris prior to installing the CAPM-3o.
- Remove the lid from the CAPM-3o, use the 2 inner screws to attach the sensor to the meter and replace the lid.

**Wiring should be installed by a qualified instrumentation technician.
Some basic installation guidelines are reviewed overleaf.**

Description:

The CAPM-3o is a UL approved, intrinsically safe pickup sensor for use in Class 1, Div. 1 locations. The output signal is a frequency proportional to flow in a square wave voltage form of approximate amplitude: Supply - 1.5 V. The sensor must be installed with an intrinsic safety barrier in accordance with the guidelines detailed in document # CAP2902 - CAPM INSTALLATION IN HAZARDOUS AREA. Recommended barriers such as Pepperl & Fuchs Z787 (12-28V) are available from AW Company.

The output is a sourcing open collector transistor(NPN Type).

An NPN, sinking type is available and is designated as CAPM-3i.

Technical Data

Supply Voltage ..: 10 to 30 Volt DC
 Supply Current ..: 20 mA @ 15 Volt, Max 35mA
 Minimum Signal ..: 0.5 Hz
**Signal Output: Squarewave, $V_{High} \cong V_{cc} - 1.5V$
 $V_{Low} \cong 0V$**
 Duty Cycle: 50%
 Frequency Output : Flow dependent, up to 2000 Hz
 Load: >500Ω
 Driving Capacity : 10 mA Max
 Temperature Range: -60°F to 185°F (-50°C to 85°C)


Connections:

A - +10 to 30 Volt DC supply voltage
 B - Ground for supply and signals
 C - Frequency signal output

AW Company wire color code:

Supply Voltage: Red
 Ground: Black
 Signal: White

CAPM-3o

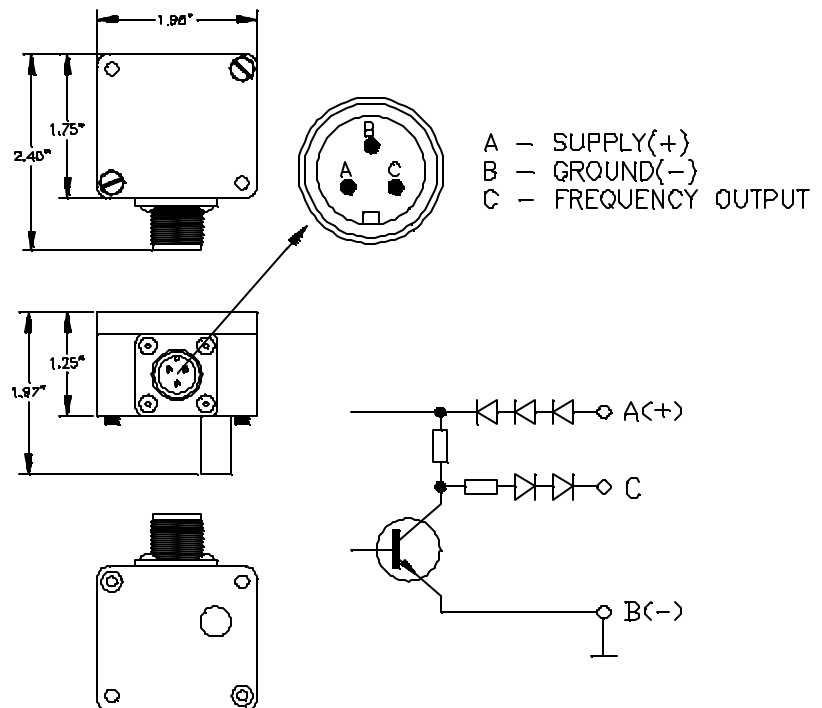

Note: If signal does not go to ground, connect external resistor, 5 K-10 Kohm, between input and ground of monitoring equipment.

Electrical Installation Tips For Sensors and Flowmeters

Wiring should be installed by a qualified electrician or instrumentation technician. When dealing with low voltage/power signals from pickups and transmitters, it is important to use a shielded cable between the transmitter and the signal processing unit. A shielded cable will keep most of the electromagnetic interference (EMI) from entering the signal cable and disrupting the signal before it can be processed. A 20-22 gauge 3 or 4 conductor cable with shield is acceptable. Recommended cable: Belden #88723 2 pair stranded, 22 awg teflon coated cable. This cable is available from AW Company.

When hooking up to instrumentation connect the shield together with the wire for the signal ground, to the **Instrument Ground** terminal.

NEVER CONNECT THE SHIELD TO GROUND AT BOTH ENDS

When hooking up to AW Company instrumentation refer to the following drawing:

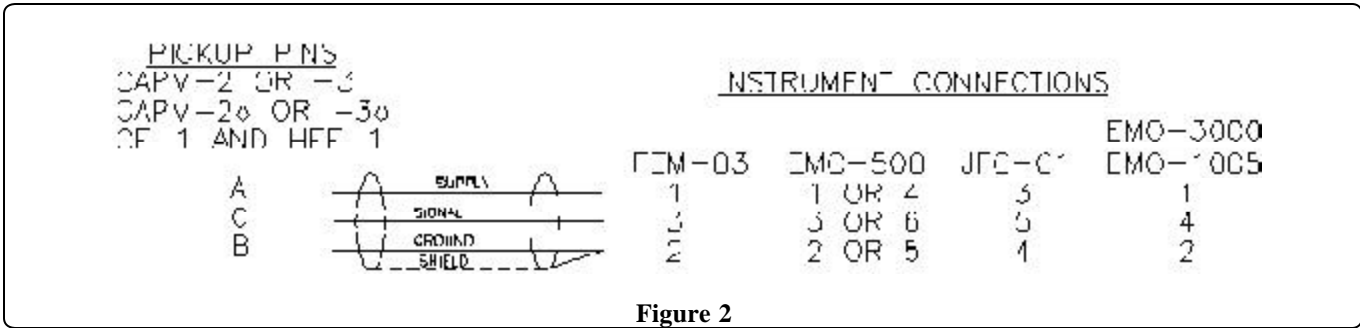


Figure 2

1. To prevent extraneous signal noise, ensure that a clean, central ground is established for both the flowmeter and sensor.
2. Where possible, keep the signal cable at least 1 foot from any cable handling 110 Volt AC. If several signal cables are used, consider using metal conduit tubing for the signal cables for extra protection and shield from external noise and EMI. If possible, ground the conduit at one end. Ground to a water pipe or another good ground connection.
3. Place the pickup well away from motors, starters and relays. If used in a location where there are starters and other controls using relays, be sure there are diodes mounted across the coils for DC relays, and an R-C network for AC relays. This will dampen EMI from the relays when they operate.
4. Supply clean, regulated DC power with a ripple under 3% of supply.


If the sensor appears faulty - review the following steps.

1. Detach the wiring connector from the sensor. Using a short wire, repeatedly touch pin A to C inside the wiring connector. These simulated pulses should register at the instrument. If this doesn't occur, verify that the wiring connections are set up as shown in the Figure 2 above and check the instrument. If using a non AW Company instrument, check the specifications for signal compatibility.
2. If the pulses do register, reattach the wiring connector to the sensor and rapidly move a screwdriver back and forth 1/16" in front of the sensor nose. If pulses register, the sensor is okay. If not, contact the factory for a return tracking number.

Note: If the sensor transmits a frequency irrespective of flow or by touch, the cable shielding and/or grounding is faulty and the equipment is behaving as an antenna.


CAPM INSTALLATION IN HAZARDOUS AREA MODELS 2o, 2i, 3o, 3i


REV	DESCRIPTION	DATE	APPR. BY
A	CONCEPT DRAWING	03-26-96	J.S.
B	ADDED o & i VERSIONS	02-20-97	J.S.
C	ADDED 2nd SET OF ENTITY PARAMETERS	07-10-98	J.S.

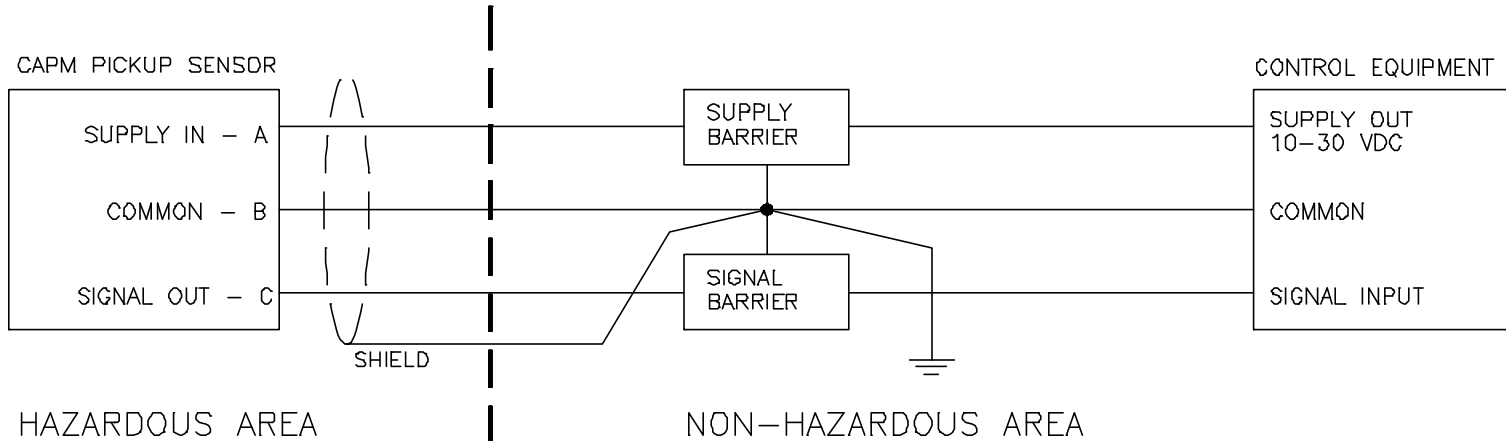

NOTES ON CAPM SENSORS

- COMMON (B) IS CONNECTED TO SENSOR CASE, BUT CAN BE DISCONNECTED.
- SUPPLY: 10-30 VDC
20 mA @ 15 VOLT, MAX 35 mA
- ENTITY PARAMETERS

FOR CAPM'S BEARING THE  MARK
 $C_i = 0$, $L_i = 1.5$ mH
 $V_{max} = 30$ VDC, $I_{max} = 90$ mA

FOR CAPM'S WITHOUT THE  MARK
 $C_i = 0$, $L_i = 1.5$ mH
 $V_{max} = 30$ VDC, $I_{max} = 110$ mA


NOTES ON BARRIERS

- MUST BE INSTALLED IN ACCORDANCE WITH GUIDELINES PROVIDED BY THE MANUFACTURER, AND SUITABLE FOR FOR CLASS 1, GROUPS A, B, C AND D HAZARDOUS LOCATIONS.
- CABLE CAPACITANCE PLUS INTRINSICALLY SAFE EQUIPMENT CAPACITANCE MUST BE LESS THAN THE MARKED CAPACITANCE (C_a) SHOWN ON ANY BARRIER USED. THE SAME APPLIES FOR INDUCTANCE. TYPICAL CABLE CAPACITANCE IS 60pF/ft, AND TYPICAL CABLE INDUCTANCE IS 0.20μH/ft. (FROM UL913)
- SELECTED BARRIERS MUST MEET THE FOLLOWING CRITERIA:
 $V_{oc} \leq V_{max}$
 $I_{sc} \leq I_{max}$
 $C_a \geq C_i + C_{cable}$
 $L_a \geq L_i + L_{cable}$
 THE SUM OF BOTH CHANNELS ON DUAL CHANNEL BARRIER AND THE SUM OF EACH CHANNEL ON SINGLE CHANNEL BARRIERS MUST NOT EXCEED I_{max} .
 ALL BARRIERS MUST HAVE SAME POLARITY.
- CAPM MUST BE CONNECTED TO AN EARTH GROUND TERMINAL OF LESS THAN 1Ω.

NOTES ON CONTROL EQUIPMENT

- MAINS POWER MUST NOT EXCEED 250 VOLTS RESPECT TO EARTH.

THIS PRINT, INCLUDING THE INFORMATION CONTAINED IN IT, IS THE PROPERTY OF A.W.COMPANY. IT IS CONSIDERED PROPRIETARY IN NATURE AND MAY NOT BE USED OR DISCLOSED OUTSIDE OF A.W.COMPANY EXCEPT UNDER PRIOR WRITTEN AGREEMENT.
 ANY MODIFICATIONS MADE TO OR COMMENTS WRITTEN ON THIS DRAWING BY UNAUTHORIZED PERSONNEL WILL VOID THIS DRAWING.
 THIS IS NOT A MANUFACTURING DRAWING UNLESS INDICATED AS SUCH. ANY DIMENSIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE.

 AW COMPANY FRANKSVILLE, VI 60120	
TITLE: CAPM INSTALLATION	
DRAWING NUMBER: CAP2902C	
DRAWN BY: GUS SKIAKER	
DATE: 03-26-96	CHECKED BY: G.S.
PAGE: 1 OF 1	SCALE: NONE